

**The Flexopower SolarPouch is compatible with (April 2007):**

**Garmin GPS**

Edge 205/305  
Forerunner 205/301/305  
Foretrex 201  
eTrex Vista C/Legend C  
StreetPilot i3 / C-series  
GPS Map 60 / 76 series

**Entertainment**

Apple iPod/Video  
MP3 player  
Sony PSP (portable play station)  
i-Theater II Video Eyewear

**Motorola**

388c A1000 A630 A760 A830 A835 A840 A845 A860 A920 A925 C113 C118 C139 C331 C332 C333 C341 C343  
C343c C350 C353 C650 C975 C980 E310 E380 E398 E770 E815 E1000 HF800 HS805 HS810 HS820 HS850 i30sx i35s  
i50sx i55sr i55sx i58sr i80s i85s i88s i90c i90cse i95cl iM1000 MPx220 PEBLU6 SLVRL7 T300p T720 T720i T721  
T722 T722i T725 T725G T730 T731 T193 T193M T2260 T2282 T2290 T2297 Timeport 270c Timeport P280 V3  
V3i V3x V60c V60g V60i V60p V60s V60t Color V60x V65p V65s V66 V70 V80 V120 V120c V120e V120t V120x  
V171 V200 V260 V262 V265 V300 V330 V360 V400 V500 V505 V510 V535 V550 V551 V555 V60 V600 V600i V620  
V635 V710 V810 V980 V1050 V180 V220 V2260 V2267 V2282 V2290 V2297 V2397

**Nokia**

1100 1101 1108 1221 1261 1600 2100 2112 2115i 2116 2260 2270 2275 2280 2285 2300 252 2600 2650 282 3100  
3105 3108 3120 3200 3205 3210 3220 3230 3285 3300 3310 3315 3330 3350 3360 3361 3390 3395 3410 3510  
3510i 3520 3530 3560 3570 3585 3585i 3586 3586i 3587i 3588i 3589i 3590 3595 3600 3610 3620 3650 3660 5100  
5110 5120 5125 5140 5160 5165 5170i 5180i 5185i 5190 5210 5300 5510 6010 6015 6015i 6016i 6020 6021 6030  
6100 6101 6108 6120 6160 6161 6162 6170 6185i 6190 6200 6210 6220 6225 6230 6230i 6250 6255i 6260 6310  
6310i 6340 6340i 6360 6370 6385 640 650 6510 6560 6585 6590 6590i 6600 6610 6610i 6620 6630 6650 6651  
6670 6680 6681 6800 6810 6820 6822 7110 7160 7190 7200 7210 7250 7250i 7260 7270 7280 7600 7610 7650  
7710 8210 8250 8260 8265 8265i 8270 8280 8290 8310 8390 8810 8850 8850Gold 8855 8860 8890 8910 8910i  
9200 9210i 9290 9300 9500 HDW-3 HS-11W HS-3W HS-4W N-GageQD N70 N90 THR850 THR880

**Samsung**

SCH-A210 SCH-A310 SCH-A399 SCH-A475 SCH-A505 SCH-A509 SCH-A530 SCH-A539 SCH-A561 SCH-A563 SCH-  
A564 SCH-A591 SCH-A592 SCH-A595 SCH-A599 SCH-A610 SCH-A650 SCH-A670 SCH-A720 SCH-A809 SCH-X219  
SCH-X309 SCH-X319 SCH-X359 SGH-A200 SGH-A288 SGH-A300 SGH-A308 SGH-A400 SGH-A408 SGH-A500 SGH-  
A608 SGH- A800 SGH-C100 SGH-C120 SGH-C207 SGH-D100 SGH-D410 SGH-D415 SGH-D500 SGH-D500C SGH-D508  
SGH-D600 SGH-D820 SGH-E100 SGH-E105 SGH-E315 SGH-E316 SGH-E317 SGH-E330 SGH-E335 SGH-E400 SGH-  
E700 SGH-E860 SGH-N200 SGH-N288 SGH-N400 SGH-N500 SGH-N620 SGH-N625 SGH-N626 SGH-N628 SGH-N635  
SGH-P107 SGH- P207 SGH-E715 SGH-K258 SGH-P408 SGH-Q200 SGH-Q208 SGH-Q300 SGH-R200 SGH-R208 SGH-  
R210 SGH-R220 SGH-R225 SGH-R225m SGH-S307 SGH-T100 SGH-T108 SGH-T200 SGH-T208 SGH-T400 SGH-T408  
SGH-T410 SGH-T500 SGH-V200 SGH-V205 SGH-V206 SGH-X100 SGH-X105 SGH-X150 SGH-X425 SGH-X426 SGH-  
X427 SGH-X427m SGH-X600 SGH-Z500 SGH-ZV10 SPH-A790 IP-A790 MM-5600

**LG**

KB800 KB970 KG220 KG320 KG800 KG810 KG920 U300 U400 U830 U880 U890 U8380 L343i

**SonyEricsson**

A2218z Akono HBH-300 Akono HBH-600 Akono HBH-602 Akono HBH-660 Akono K500i HBH-200 HBH-35 HBH-65  
J200c J210c J300c K300c K300i K200i K500c K506c K508c K700c K700i K750i P800 P802 P900 P908 P910a P910c  
P910i R300 R380World T100 T200 T226 T230 T237 T28World T28z T300 T306 T310 T316 T39m T60 T60i  
T606 T608 T61 T61c T61d T61LX T61z T610 T616 T62U T630 T637 T68 T68i T68m V600i V800 W900i W550i  
Z1010 Z200 Z208 Z500a Z600 Z608

**There are more items compatible to the Flexopower SolarPouch. If you do not find your device listed, please ask us. We are happy to help.**